

## Honeywell 1470g Scanner Configuration

The settings below will properly configure your scanner. Important: Scan the configuration codes in the order that they appear below. Be careful to point the scanner directly at each bar code.

1. Reset the scanner to its default settings:



2. Enable expanding the UPC-E (8-digit) to UPC-A (12-digit) codes:



3. Append CR/LF:



4. **OPTIONAL.** If you find that your scanner's beep is too loud, scan this code to set its volume to the lowest level. Most locations will keep the default level.

